

Subject: : AmigaOS4

Topic: : X5000 UBOOT freeze - Fixed

Re: X5000 UBOOT freeze

Author: : tonyw

Date: : 2020/1/23 11:37:15

URL:

Ignore NutsAboutAmiga, there is nothing wrong with your RAM.

The output from your RAM init sequence is quite normal, there is something else wrong, much later.

Have you tried:

1. Remove the graphics card and all plugin cards.
2. Replace the CR2032 coin cell.

In my X5000s, I sometimes have to pull out the RAM DIMMs and clean the sockets with a small stiff brush (like every 6 months). I also clean the edge connectors of the DIMMs with a fine eraser, not handling the connector afterward.