

Subject: : AmigaOS4

Topic: : X5000 booting from USB without loading additional files from HDD + bootmenu mouse issues

X5000 booting from USB without loading additional files from HDD + bootmenu mouse issues

Author: : kas1e

Date: : 2020/12/20 10:53:48

URL:

@All

Have a little issue about booting from USB on x5000.

I have my os4 ISO raw-write to the USB stick, and then to boot from I just go to Uboot and type there "usb reset" and then "boota".

And it will load up from the USB stick.

Now:

1). If I plug off my HDD, then it boots up from the USB stick fully as expected, with the suggestion to install OS, etc. All as expected.

2). If I attach my HDD which have already installed the system (but corrupted/broken) and repeat the same steps (i.e. "usb reset" and "boota" from uboot), then the kickstart modules and all initial stuff loads up from the USB, but remain files (like startup files, etc) loads up from my HDD's system partition.

Question is: how with plugged on HDD with working system partition, but broken installation, still boot from USB ONLY, but without disabling partition of HDD or whole HDD, so when I boot from USB I still need to install the clean OS over the broken/messed one on HDD.

Maybe by changing boot priority of HDD from 0 to let's say 1 (in hope that one from USB has 0)?