

Subject: : AmigaOS4

Topic: : New Sam460cr boards will hit the road soon!

Re: New Sam460cr boards will hit the road soon!

Author: : kas1e

Date: : 2021/4/29 6:34:02

URL:

@Max

First i tried this with sii3114\_conf :

Quote:

```
] setenv sii3114ide_conf 10  
] boota
```

No luck, the same.

Then I put back 3512, attached it to the port where UBoot sees it, and doing as you say:

Quote:

```
] setenv sii3512ide_conf 10  
] saveenv  
Saving Environment to EEPROM...  
] reset
```

Then reboot, and output now:

Quote:

```
[sii3512ide/dev_init] Config forced in $sii3512ide_conf : 10  
[sii3512ide/dev_init] Found chip #0  
[sii3512ide/init_port] ---> Port 0  
[sii3512ide/init_port] IOBase 00001000, AltBase 0000100A
```

```
[sii3512ide/init_port] bmcr_base 00001020
[sii3512ide/init_port] MMIOBase 80000000
[sii3512ide/init_port] Config forced, won't scan port 0
[sii3512ide/init_port] 1 device(s) on port
[sii3512ide/port_list] 0 Master : 'ATA'
[sii3512ide/init_port] Starting 'sii3512ide.device - chip 0 port 0' task
[sii3512ide/int_install_handler] Installing handler for irq 48
[sii3512ide/init_unit] Trying to configure unit 0
[sii3512ide/ata_read_drive_properties] multi_count 1
[sii3512ide/ata_read_drive_properties] Adjusting unit 0 to xfer mode 70
[sii3512ide/init_unit] Unit configured, flags $0187
[sii3512ide/init_port] Port 0 task started
[sii3512ide/init_port] ---> Port 1
[sii3512ide/init_port] IOBase 00001010, AltBase 0000101A
[sii3512ide/init_port] bmcr_base 00001028
[sii3512ide/init_port] MMIOBase 80000000
[sii3512ide/init_port] Config forced, won't scan port 1
[sii3512ide/init_port] 0 device(s) on port
[sii3512ide/dev_init] All done
[sii3512ide/find_unit] unitnum 2 invalid (!chip)
[sii3512ide/find_unit] unitnum 3 invalid (!chip)
[sii3512ide/find_unit] unitnum 4 invalid (!chip)
[sii3512ide/find_unit] unitnum 5 invalid (!chip)
[sii3512ide/find_unit] unitnum 6 invalid (!chip)
[sii3512ide/find_unit] unitnum 7 invalid (!chip)
```

Unit configured, flags \$0187! Yeah! Now I can see it in the MediaToolBox!

Interesting through why 3114 didn't work like that? I for sake of tests tried to put 3114 back again, and set variable for + reboot, no, still no luck. But 3512 is fine always with this "sii3512ide\_conf 10"